Step 1: Fit K-Shields on base of the radio Antenna, Example on Kathrein Antenna




Step 2: Place the ends above and below of the base supporting bracket.



Step 3: Place the ends above and below the base



Step 4: Fasten of Velcros

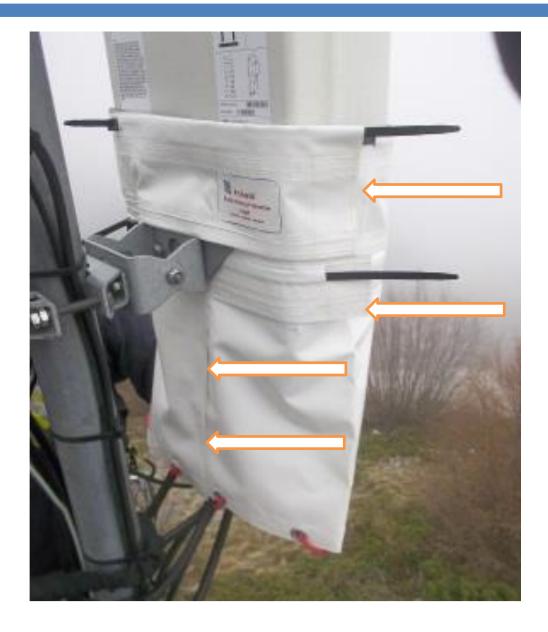

Step 5: Fasten the plastic Ties using Tie Crip Fasten tool.



Step 6: Tie the bottom of the Antenna.

